



1340 North Melrose Drive, Vista, CA 92083

Phone 951-587-9222 Fax 760-758-5991

Email: info@motoworks.com

SR4 4 Stroke Racing System

2008-10 Kawasaki Teryx 750

Part# 60-5002

Slip-On

Exhaust Kit Bill of Materials

1	Instruction sheet
1	Tailpipe with SR4 muffler
2	8x1.25x25mm bolt
2	8mm flange nut
2	8mm lock nut
2	Aluminum Spacers
1	Spark arrestor
2	Motoworks stickers


**Caution: LET UTV COOL DOWN AT LEAST 1 HOUR BEFORE BEGINNING
INSTALLATION.**

Note: READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION.

Removal of the Stock Exhaust:


- 1.** Lift tailgate bed to access stock exhaust system.
- 2.** Loosen the two clamps securing the stock muffler to the stock head-pipes (**Fig. 1**).

Figure 1

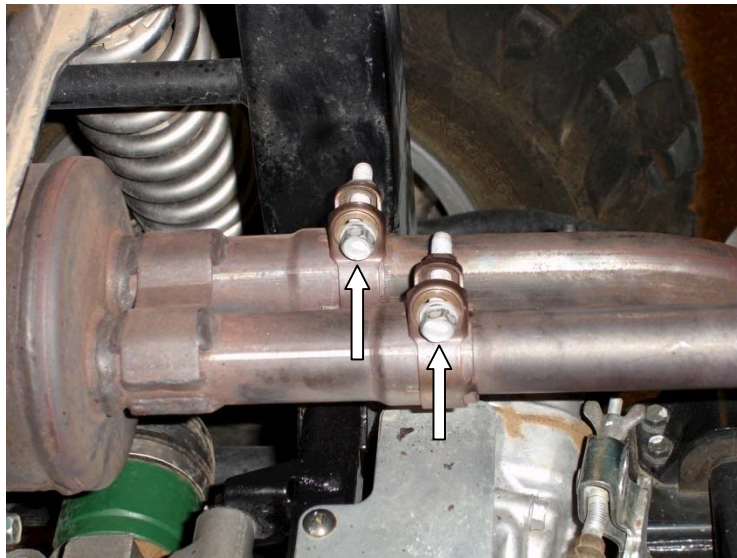

- 3.** With the tailgate bed back down, remove the two bolts securing the stock muffler to the chassis (**Fig. 2**).

Figure 2

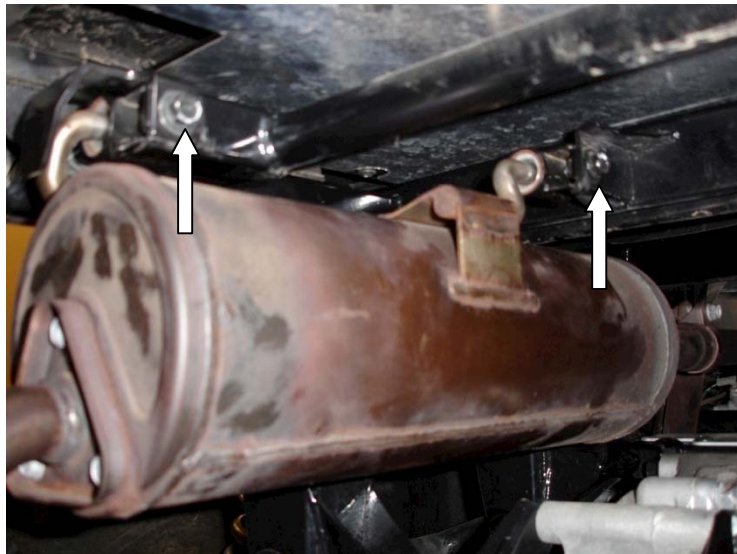

4. Carefully slide the stock muffler off the stock head-pipes and remove.

Installation of the Motoworks Slip-On Exhaust:

5. Carefully install the supplied aluminum spacers into the Motoworks Slip-On collector section.
6. Using the Motoworks supplied nuts, bolts and lock washers, secure the Motoworks Silencer onto the chassis and tighten (**Fig. 3**).

Figure 3



7. Ensure that the tailgate bed is latched and secured.
8. RE-CHECK ALL YOUR WORK.

Note: It is normal for the new exhaust to emit white smoke the first time you start the ATV. This is from the oil used during manufacturing.